




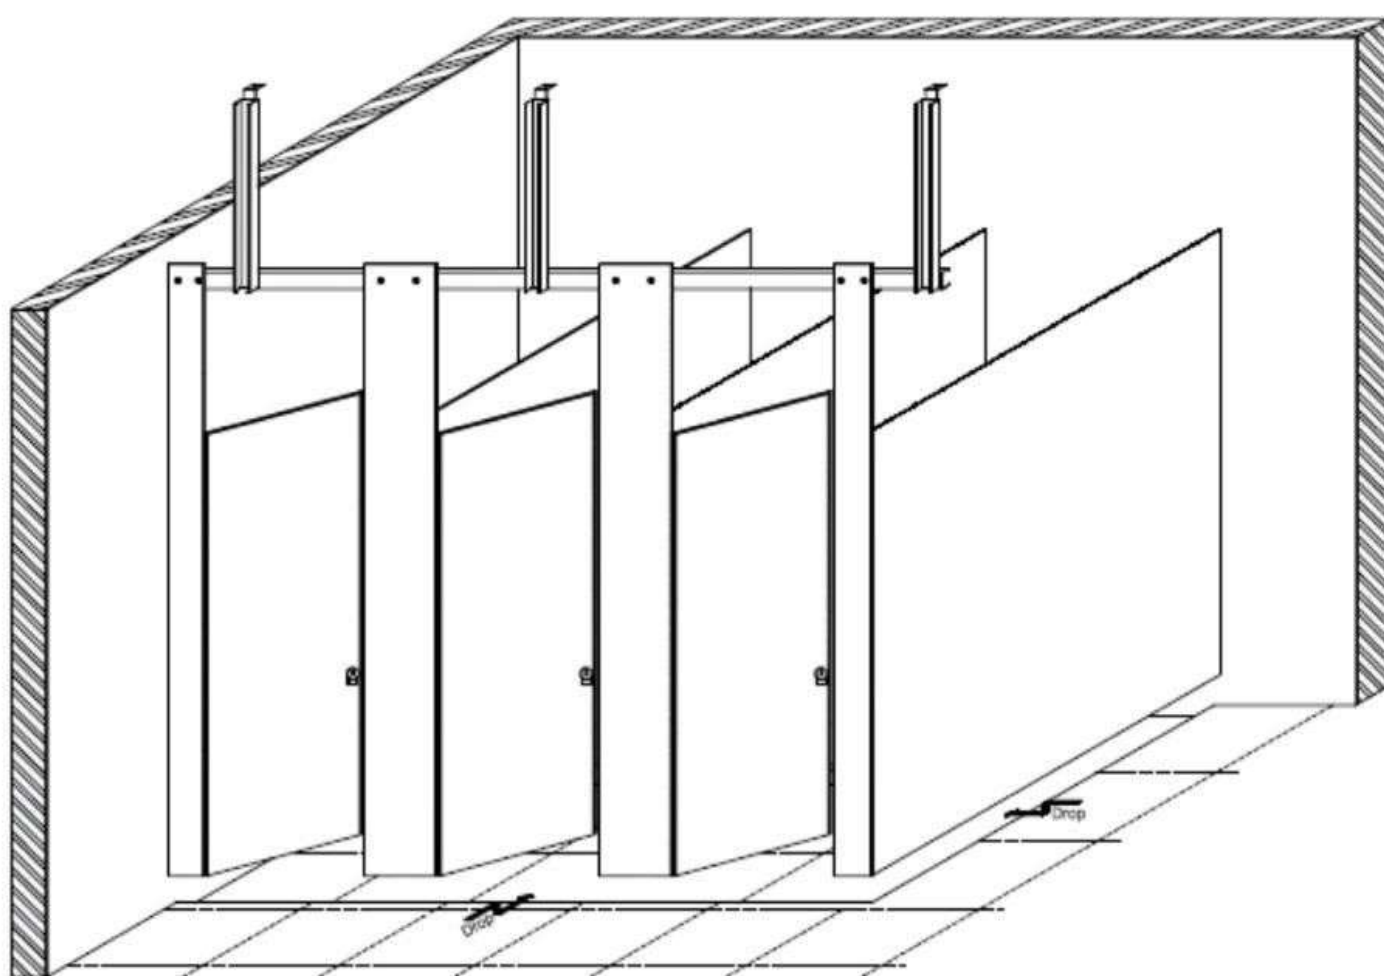


# D' FLOAT

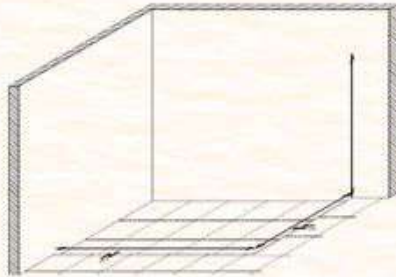


1) Site measurement will be taken before install by our team for factory pre-fabrication

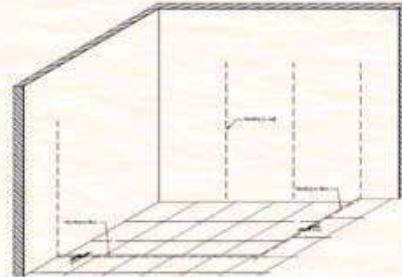


2) Mark dimension on the floor & wall during installation day

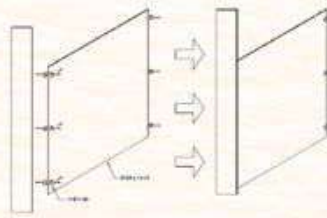


3) Prepare the connection between the pilaster and the dividing panel using the wall angle

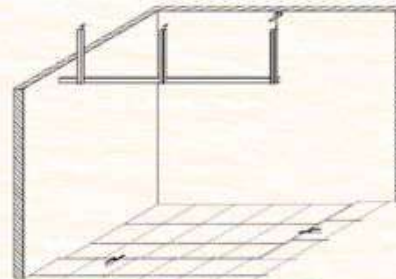


4) Install C-purlin on the required position and height

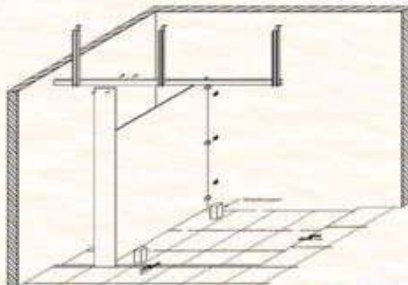

5) Install the dividing panel to the wall and attach the pilaster to the C-purlin with temporary support, repeating the steps until all sections are done.

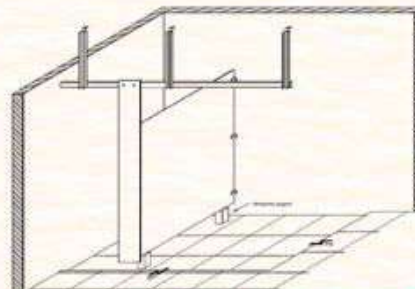

6) Install the dividing panel to the wall and attach the pilaster to the C-purlin with temporary support, repeating the steps until all sections are done.

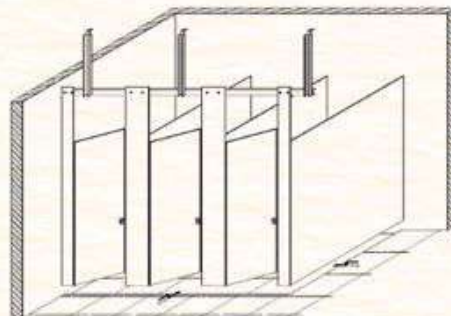

7) The last step involves installing the door panel along with all required accessories