




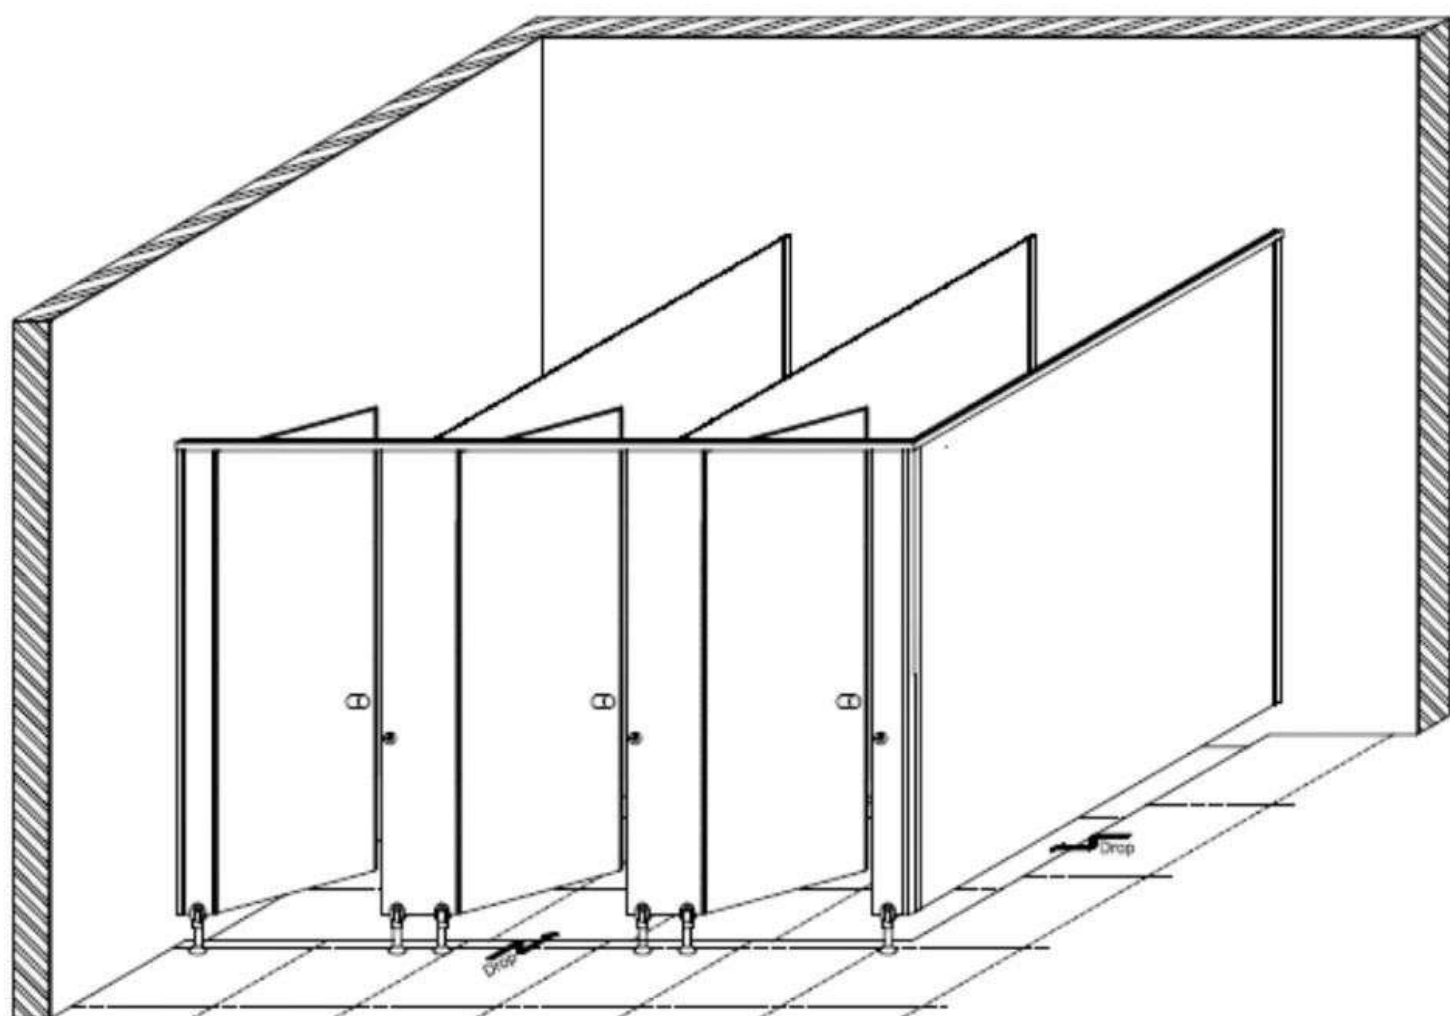


D' NYLON

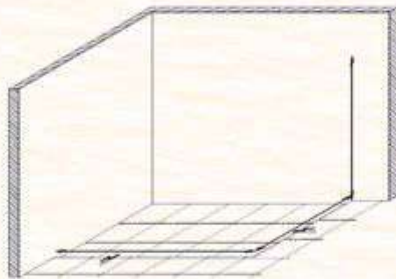


1) Site measurement will be taken before install by our team for factory pre-fabrication

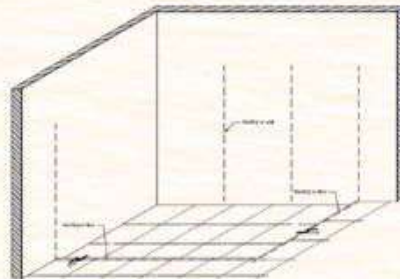


2) Mark dimension on the floor & wall during installation day

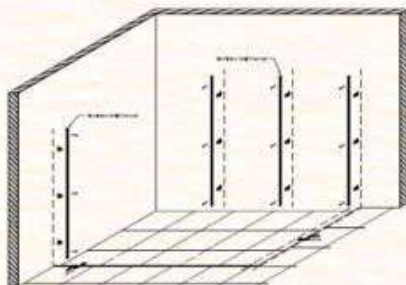


3) Aluminium wall support installation

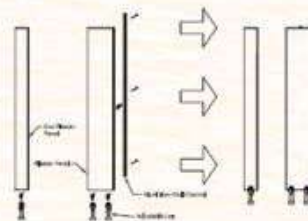


4) Preparation adjustable leg & wall angle secure on front pilaster

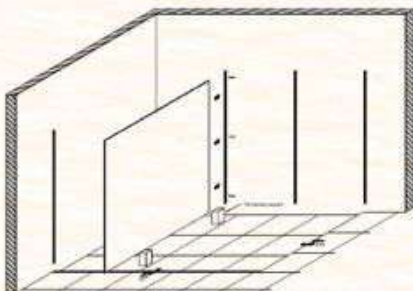


5) Position and secure the dividing panel to the wall using temporary supports, then continue the same procedure for the remaining panels.

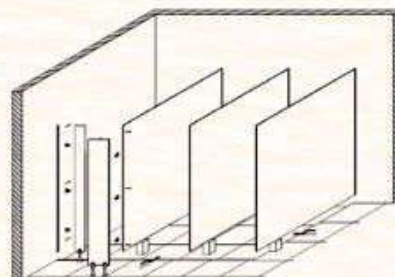

6) Secure the pilaster to the dividing panel and continue with the same installation sequence until finished

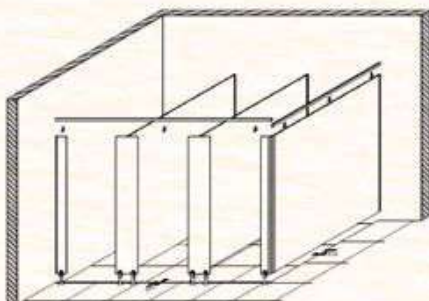

7) Set the top rail in place and ensure it is properly aligned

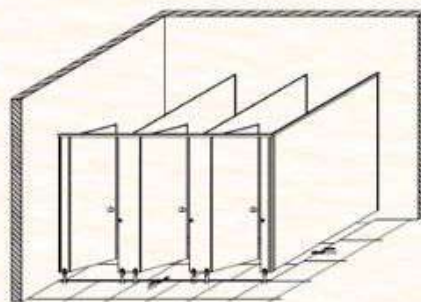

8) The last step involves installing the door panel along with all required accessories